



BACKLINE	
BATERIA	Mapex M Series: Bombo, Caixa, Charles, Tom1 (12”), Tom2 (13”), Goliat (15”), Crash i Ride.
AMPLIFICADOR DE BAIX	Capçal: MAG 300H EVO II Pantalla: MAG 410T
AMPLIFICADOR DE GUITARRA 1	Fender Deluxe Vintage
AMPLIFICADOR DE GUITARRA 2	Roland 80 W
MIDI KEYS	Virtual Instruments (B3-Piano-Marimba) Mbox2

Canal	Instrument	Micròfon		+48 V	DI	Linea
		Preferents	Opcional			
1	Bombo	ATM250	D112			XLR3F - XLR3M
2	Caixa	SM57				XLR3F - XLR3M
3	Charles	e614	C430	+48 V		XLR3F - XLR3M
4	Timbala 1	e608	e604			XLR3F - XLR3M
5	Timbala 2	e608	e604			XLR3F - XLR3M
6	Goliat	e608	e604			XLR3F - XLR3M
7	Ambient L	C1000S	C430	+48 V		XLR3F - XLR3M
8	Ambient R	C1000S	C430	+48 V		XLR3F - XLR3M
9	Pantalla de Baix				Capçal	XLR3F - XLR3M
10	Amplificador de Guitarra 1	SM 57				XLR3F - XLR3M
11	Amplificador de guitarra 2	SM 57				XLR3F - XLR3M
12	Teclat L				DI	TRS - XLR3M
13	Teclat R				DI	TRS - XLR3M
14	Flauta Travessera	SM 87A	SM57	+48 V		XLR3F - XLR3M
15	Trompeta	Beta 57A	SM 57			XLR3F - XLR3M
16	Saxofón Alto	Beta 57A	SM 57			XLR3F - XLR3M
17	Saxofón Tenor	Beta 57A	SM 57			XLR3F - XLR3M
18	Veü Putxi	SLX24/ Beta58	Beta 58			XLR3F - XLR3M
19	Veü Axel	Beta 58	SM 58			XLR3F - XLR3M

Canal	Instrument	Micròfon		+48 V	DI	Linea
20	Veü Eduard	Beta 57A	SM 57			XLR3F - XLR3M
21	Veü Oriol	Beta 58	SM 58			XLR3F - XLR3M


Monitors

Monitor	Music
1	Flauta / Trompeta
2	Saxofón Alto / Saxofón Tenor / Veü Eduard
3	Veü Putxi
4	Veü Axel
5	Guitarra 2 / Veü Oriol
6	Guitarra 1
7	Baix
8	Bateria
9	Teclats

Preferències d'enviaments per monitor:

1. Veü Principal - Flauta - Trompeta - Resta Vents - Bombo - Charles - Teclat - Guitarra 1 / 2.
2. Veü Principal - Saxofón Alto - Saxofón Tenor - Chorus 3 - Resta Vents - Chorus 2 - Bombo - Charles - Teclat - Guitarra 1 / 2.
3. Trombó - Chorus 2 - Veü Principal - Chorus 1 / 3 - Bombo -Caixa -Resta Vents - Baix - Teclat - Guitarra 1 / 2.
4. Veü Principal - Chorus 2 / 1 / 3 - Bombo -Caixa - Vents - Baix - Teclat - Guitarra 1 / 2.
5. Guitarra 1 / 2 - Chorus 1 / 2 / 3 - Veü Principal - Bombo - Caixa - Vents - Teclat.
6. Guitarra 1 / 2 - Bateria - Baix - Guitarra 2 - Veü Putxi - Veü Axel - Mescla Vents.
7. Baix - Bombo - Caixa - Veü Principal - Vents - Chorus 1 / 2 / 3 - Guitarra 1 / 2 - Teclat .
8. Bombo - Caixa - Baix - Guitarra 1 / 2 - Veü Principal - Vents - Teclat.
9. Bombo - Caixa - Teclat - Veü Principal - Chorus 1 / 2 / 3 - Vents - Guitarra 1 / 2 -Baix.

Distribució d'escenri

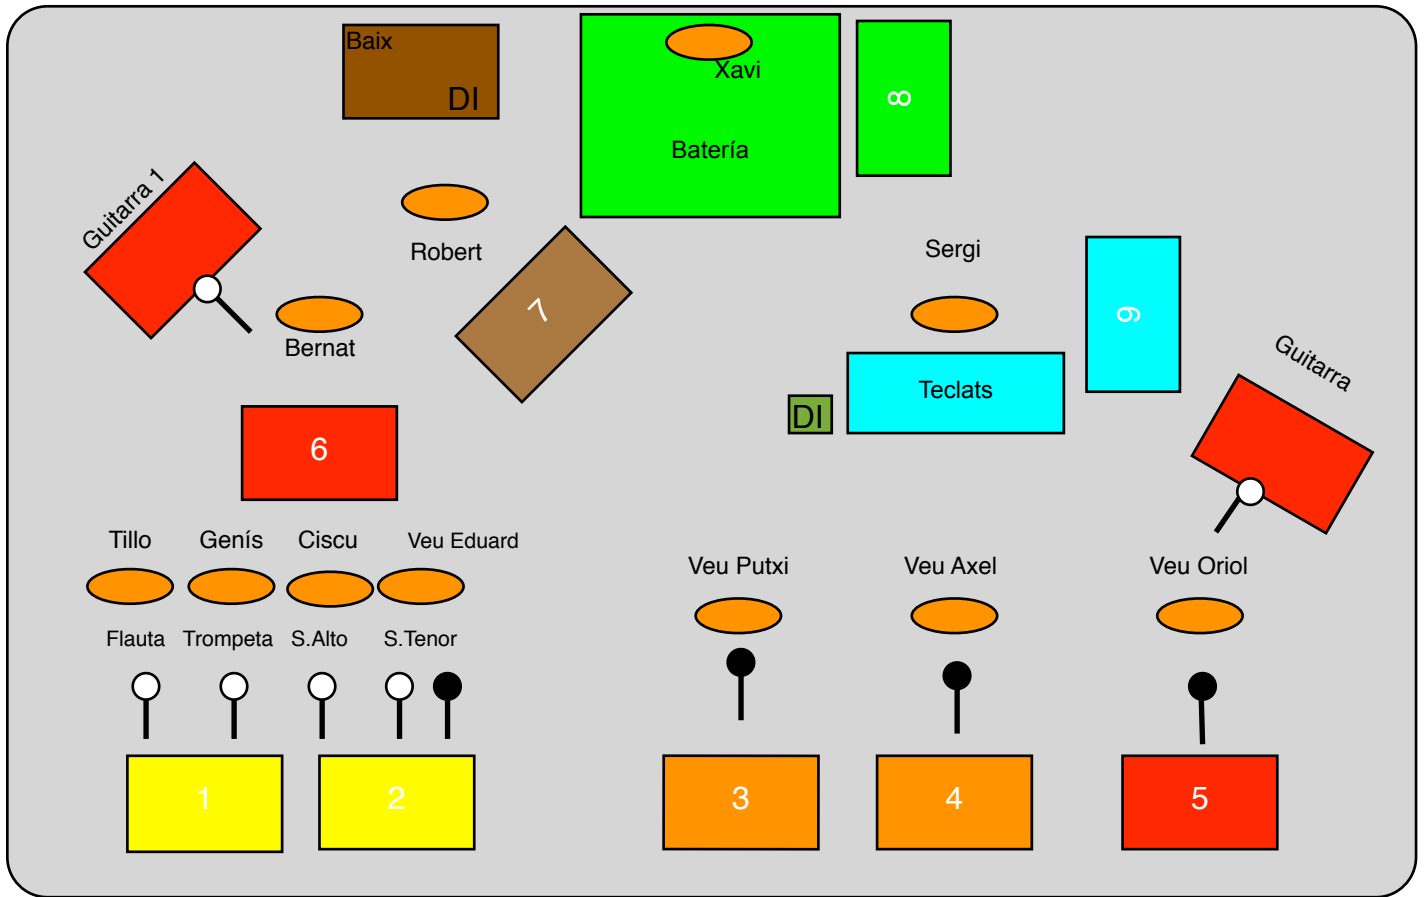

 **Microfonia Instrumental**

 **DI**

 **Microfonia Vocal**